




HOW TO SET UP YOUR HOSE CART

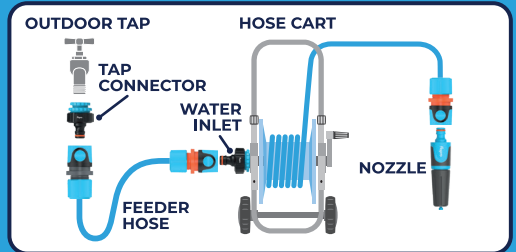

1. ATTACH TO TAP

STEP 1

Remove entire hose from cart



STEP 2

Remove bag of fittings from inside the box

STEP 3

Cut off required length of feeder hose to reach from tap to cart



STEP 4

Use 1 x Water Stop & 1 x Supergrip Connector attached to each end of the feeder hose



STEP 5

Screw outdoor tap connector to tap & attach feeder hose



STEP 6

Screw on the Water Inlet and attach the feeder hose




2. ATTACH CART HANDLE

Line up and insert the towing handle into the holes at the side of the frame



Attach the handle stopper plugs with a screw on both sides

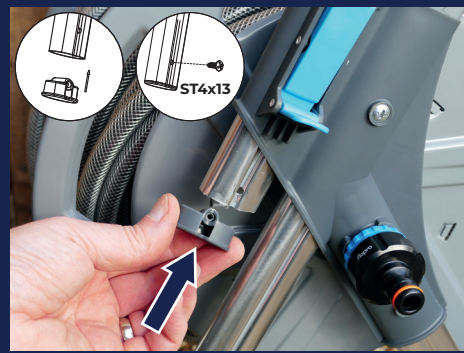

Assemble the winding handle & attach to cart with grey nut



3. GET HOSE READY ON CART

STEP 1

Push the spring into the centre of the inlet



STEP 2

Thread inlet nut on hose and push over the spring



STEP 3

Tighten until firmly fixed



STEP 4

Remove nut from waterstop connector (orange body)



STEP 5

Thread nut over hose & tighten the connector



STEP 6

Attach nozzle with connector



STEP 7

Wind hose back on reel



STEP 8

Turn on tap when ready to use



ATTACHING THE HOSE INSIDE THE DRUM

STEP 1



STEP 2



STEP 3

